

Tatkraft

CLASSIC ELECTRONIC KITCHEN SCALES

INSTRUCTION FOR USE



ISO 9001:2008


art. 20276

■ FEATURES

1. Indicate volume of water and milk.
2. Two weight unit systems g, lb:oz convertible.
3. Two volume unit systems ml, fl'oz convertible.
4. Low battery power/Overload Indication.
5. With high precision strain gauge sensor.
6. With tare function.
7. Auto off.

■ TO INSTALL OR REPLACE BATTERY

2×1.5V AAA batteries (included).
Remove package foil before use.

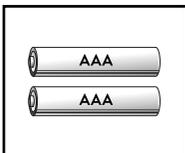

1. Take out used batteries, with the aid of a sharp object if needed.
2. Install new batteries by putting one side of the battery down first and pressing down the other side. Please observe the polarity!

■ BUTTONS ILLUSTRATION



Unit conversion
(for some product, this button is on the bottom of scale)




Mode conversion




Switch, Zero, Tare

■ LCD DISPLAY

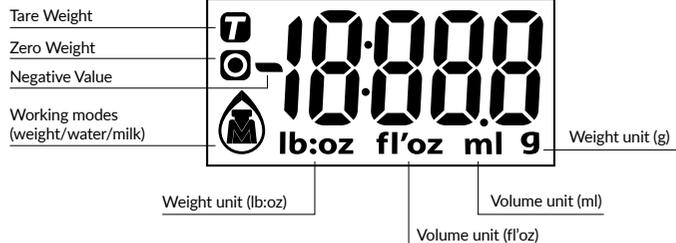


■ WORKING MODES

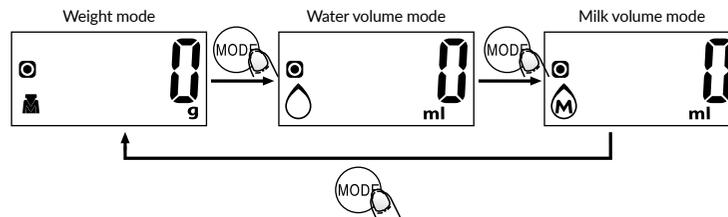

■ TO CONVERT WEIGHT UNIT


If the scale is with both unit systems of Metric (g, ml) or Imperial (lb:oz, fl'oz), press button **MODE** to choose working mode (weight, milk volume, water volume), then press button **UNIT** to convert between two systems.

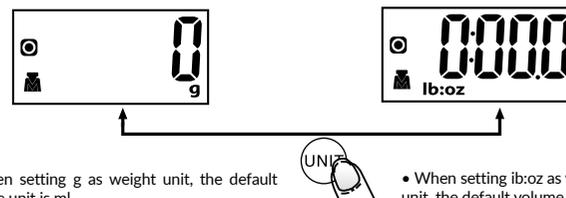

• When setting g as weight unit, the default volume unit is ml.


• When setting lb:oz as weight unit, the default volume unit is fl'oz.

■ TO START WEIGHING

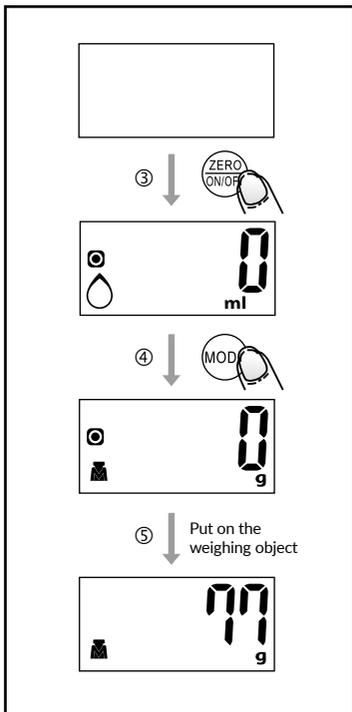

WEIGHING MODE

1. Place the scale on a solid and flat surface.
2. Place bowl (if used) on the scale before turning on the scale.
3. Press **ZERO ON/OFF** to turn on the scale.
4. Wait until LCD shows «0» to start weighing. Press button **MODE** to convert to «Weight» mode if needed.
5. Load weighing object on to start weighing, LCD will show the weight reading.
6. If the weighing object is water or milk, press button **MODE** to choose volume mode and view the volume of weighing object.

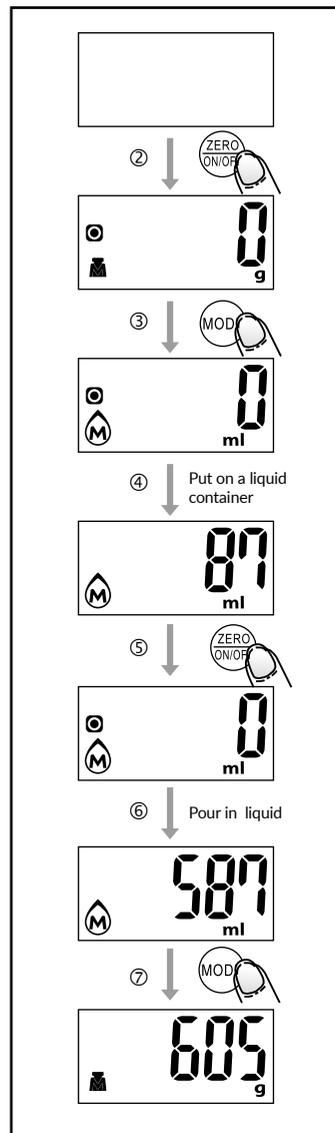


VOLUME INDICATION MODE

1. Place the scale on a solid and flat surface.
2. Press **ZERO ON/OFF** to turn on the scale.
3. Wait until LCD shows «0», and press button **MODE** to choose «Water» or «Milk» mode.
4. Put a liquid container into the scale platform.
5. Press button **ZERO ON/OFF** to reset LCD to «0».
6. Pour liquid (water or milk) into the container, LCD shows the volume of the liquid.
7. Press button **MODE** to choose «Weight» mode and view the weight of liquid.

■ «TARE» OR «ZERO» FUNCTION

To weigh different loads consecutively without removing loads from the scale.

Put first load on the scale, get weight reading. Press button **ZERO ON/OFF** to reset the LCD reading to «0» before adding next load. You can repeat this operation.

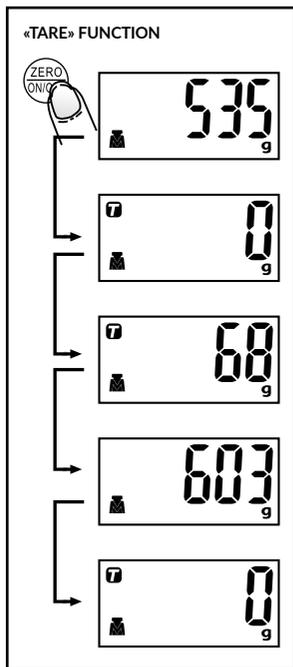

«TARE» FUNCTION


When total sum of all the weighed ingredients on the scales is more than 200 g.

LCD will show --- or «0» each time is **ZERO ON/OFF** perssed.

Symbol --- means not stable, please wait for a moment. «0» and meanwhile an icon  on the left of LCD mean **TARE** function is active.

Maximum weight capacity is reduced by total weight of all loads.

By pressing **ZERO ON/OFF** you can see the total weight of all loads on the scale. If you want to weigh more loads, just press **ZERO ON/OFF** to reset LCD reading to «0» again.

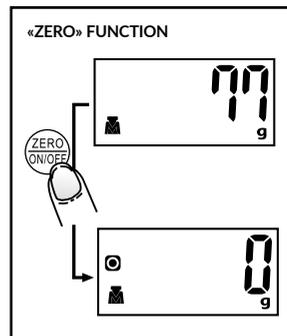

«ZERO» FUNCTION


When total sum of all the weighed ingredients on the scales is less than or equal to 200 g.

LCD will show --- or «0» each time is **ZERO ON/OFF** perssed.

Symbol --- means not stable, please wait for a moment. «0» and meanwhile an icon  on the left of LCD mean **ZERO** function is active.


Maximum weight capacity remains unchanged.

■ AUTO SHUT OFF

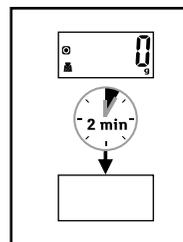

Auto shut-off occurs if display shows «0» or shows the same weight reading for 2 minutes.

■ MANUAL SHUT OFF

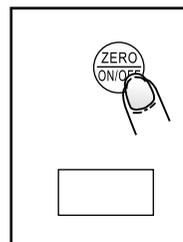

To maximize battery life, always press **ZERO ON/OFF** again to turn off the scale after using.

- When display shows «0», press **ZERO ON/OFF** to turn off the scale.
- When display shows weight reading, press **ZERO ON/OFF** for 3 seconds to turn off the scale.

■ WARNING INDICATORS



Replace new battery.



Scale overload. Remove item to avoid damage. Maximum weight capacity is indicated on the scale.

■ CLEANING AND CARE

1. Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical / abrasive cleaning agents.
2. All plastic parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavored / colored foods. Avoid contact with acids citrus juices.
3. Always use the scale on a hard, flat surface. DO NOT use on carpet.
4. DO NOT strike, shake or drop the scale.
5. The scale is high precision device. Please take care of it.
6. Please keep it dry.
7. Please check whether battery is installed or in high level if scale can not be turned on.